



TOWERS ROOM DIMENSIONS:

Towers North Rooms: X54, X58, X62, X66, X73, X77, X81, X85

Towers South Rooms: X03, X07, X11, X15, X22, X26, X30

X=FLOOR LEVEL